

S045

CABLE CARRIERS MEDIUM SERIES

 
Inner Height(A) 43mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none"> No cover (cap) on top and bottom sides Has radius to both sides. 	S045 110 R_01	70	43	110	45	130	760gr

Maximum working speed :5M/S


Radius MUST be given in your orders. Example:

S045 110 R70

R mm	H mm	X mm	M mm	Y mm
70	25	133	91.5	150

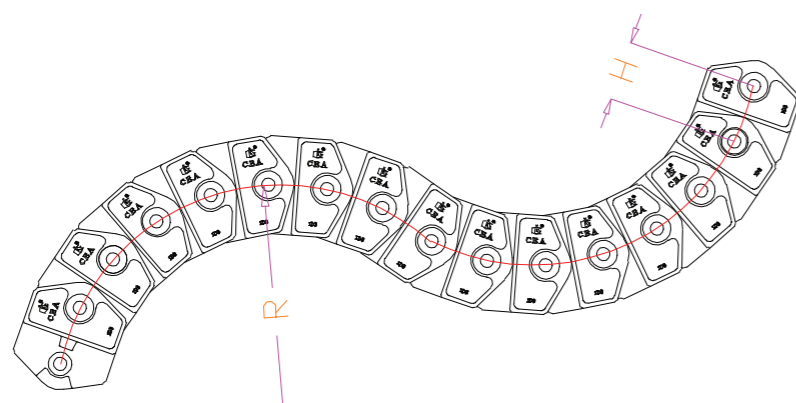

IMPORTANT POINTS

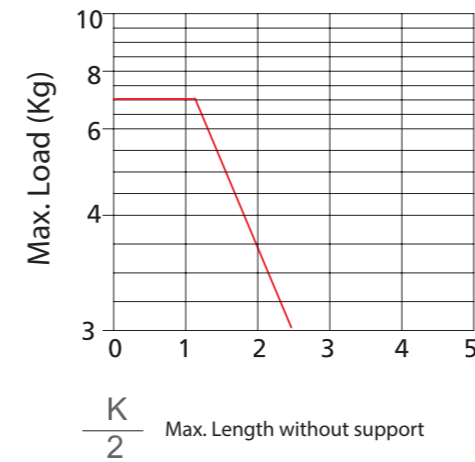 

Self-supporting Capacity Diagram

 
Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$


How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment .

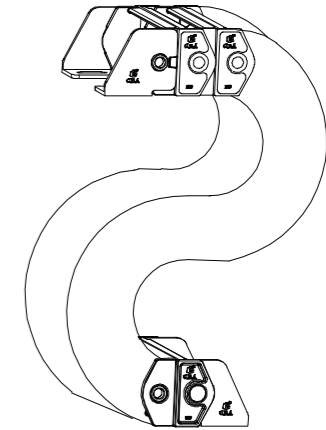

 Should be attached to the both ends of the cable carrier.

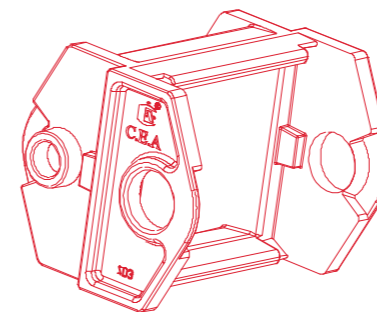

CABLE CARRIER CODE	END BRACKET CODE	A	B
S045 110 R_01	S045 B110	X	X

