

SA4


CABLE CARRIERS LIGHT SERIES

Inner Height (A) 15mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none"> • One side is fixed, other side is openable • Should be used in supporting trays • Suitable for short movement lengths 	SA4 015 R_01	40	15	15	20	24	0.224gr


Maximum working speed :5M/S

Radius MUST be given in your orders.Example:

SA4 015 R40

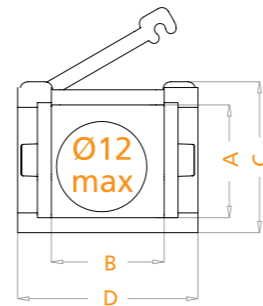


R mm	H mm	X mm	M mm	Y mm
40	20	103	69,5	186

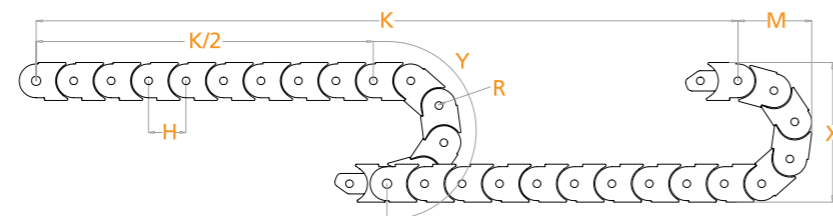


L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$

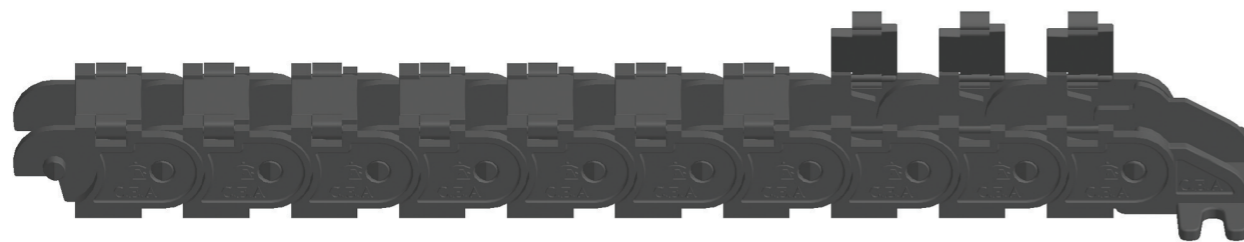

IMPORTANT POINTS

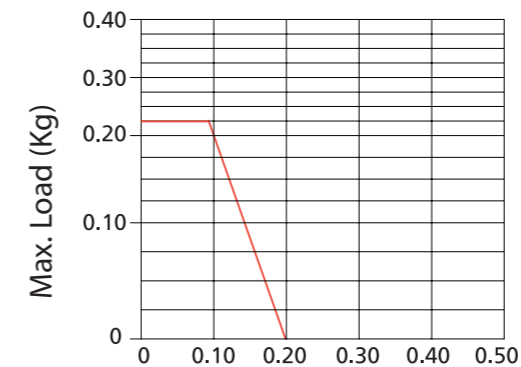


$$\frac{K}{2} \text{ Max. Length without support}$$

Self-supporting Capacity Diagram


Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

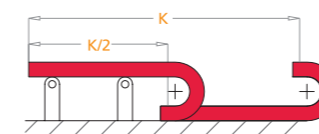

How to use support rollers:


- Support rollers should be used after 0.5 meter
- Make sure that the cap (cover) is fixed properly
- Use an appropriate hand tool (screw driver) to open the cap
- Be careful not to damage the fixing nail of the cap (cover)

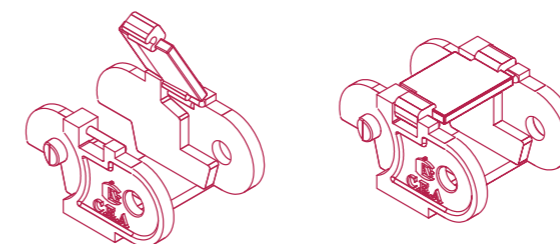

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

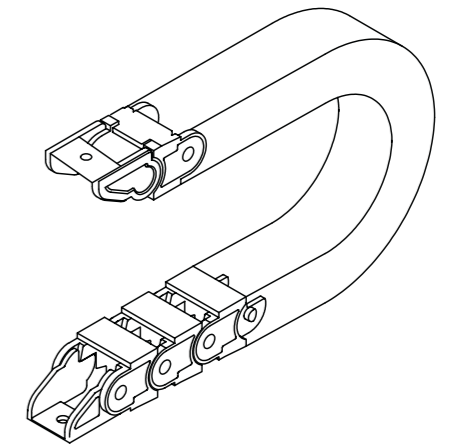

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SA4 015 R40	SA4 B01	X	X

