

SB0

 
CABLE CARRIERS LIGHT SERIES

| Inner Height (A) 18mm | Code | Radius | (A)mm | (B)mm | (C)mm | (D)mm | Weight Kg/Mt |
|--|--------------|--------|-------|-------|-------|-------|--------------|
| <ul style="list-style-type: none"> No cover (cap) on top and bottom sides Should be used in supporting trays Suitable for short movement lengths. | SB0 025 R_01 | 40 | 18 | 25 | 27 | 35 | 0.224gr |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |


Maximum working speed :5M/S

Radius MUST be given in your orders.Example:

SB0 025 R40

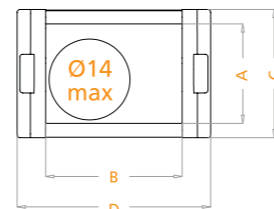

| R mm | H mm | X mm | M mm | Y mm |
|------|------|------|------|------|
| 40 | 30 | 103 | 81,5 | 186 |
| | | | | |
| | | | | |

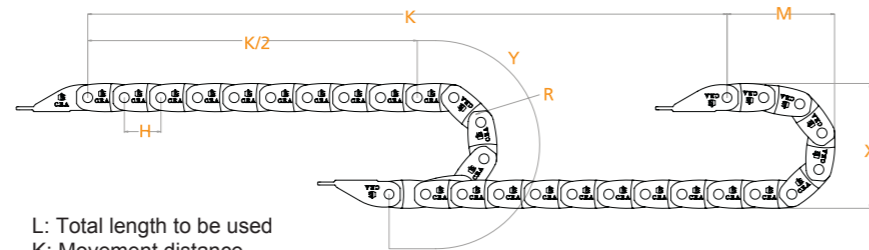 


L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$



 
IMPORTANT POINTS

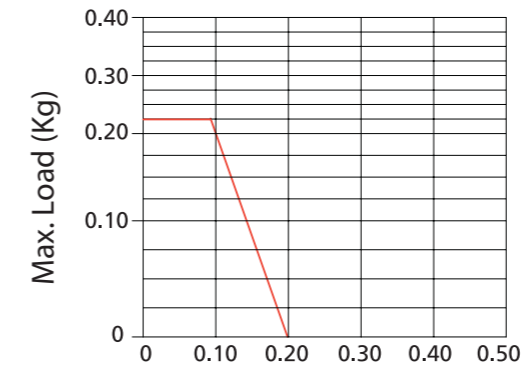


$\frac{K}{2}$ Max. Length without support

Self-supporting Capacity Diagram

 Self-supporting capacity of the cable carrier according to weight of the cables and hoses $\frac{K}{2}$

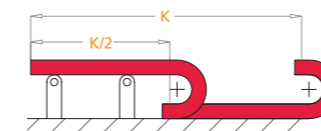

 
How to use support rollers:
• Support rollers should be used after 0.5 meter

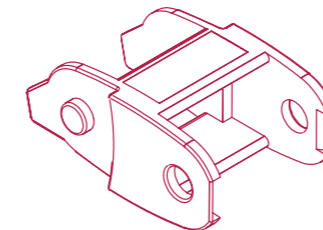

AYAK SETİNİN SEÇİLMESİ VE KULLANIMI

End bracket

 End brackets are the parts to be used to fix the cable carrier to the machine or equipment

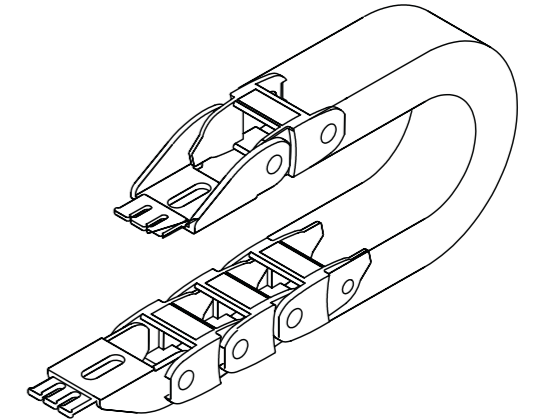

Should be attached to the both ends of the cable carrier.

| CABLE CARRIER CODE | END BRACKET CODE | A | B |
|--------------------|------------------|---|---|
| SB0 025 | SB0 B025 | X | X |
| | | | |
| | | | |
| | | | |

