

# SC2YK


## CABLE CARRIERS MEDIUM SERIES

Inner Height (A) 35mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none"> <li>• One side has fixed and complete cover, other side (radius side) has openable cover (cap)</li> <li>• Bottom side is completely closed, up side is open</li> <li>• Semi-open model</li> <li>• Should be used in supporting trays</li> </ul>	SC2AK 100 R_01	100-150-200	35	100	50	120	1.835gr


Maximum working speed :6M/S

Radius MUST be given in your orders.Example:

SC2YK 100 R100

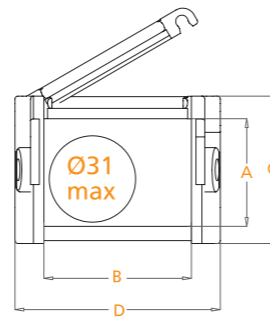

R mm	H mm	X mm	M mm	Y mm
100	56	250	181	426
150	56	350	228	562
200	56	450	278	712

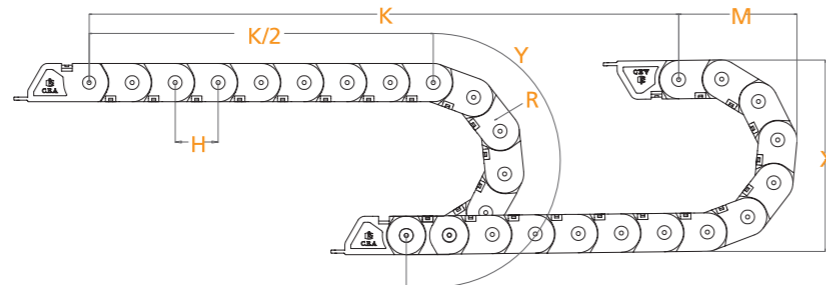


L: Total length to be used


K: Movement distance

Y: Radius

$$L: \frac{K}{2} + Y$$

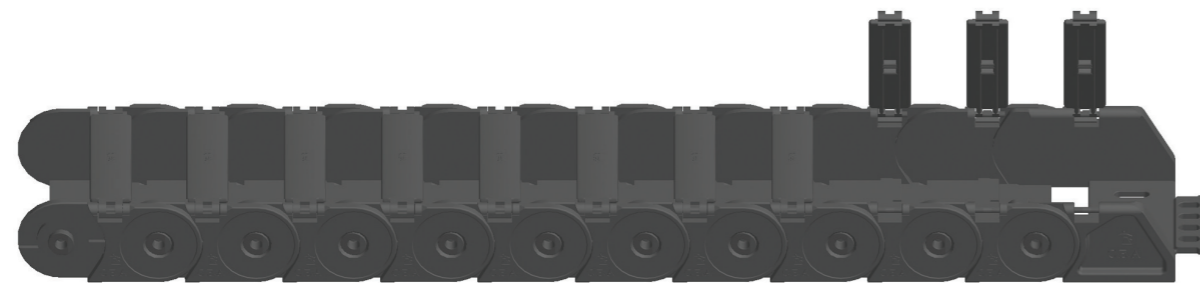


### IMPORTANT POINTS

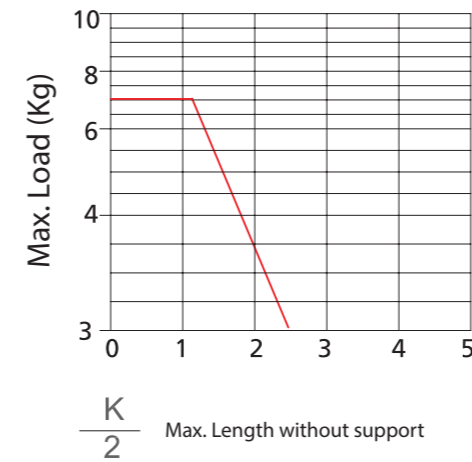

#### Self-supporting Capacity Diagram



Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

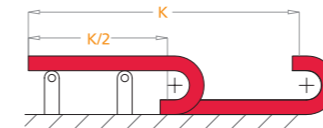

How to use support rollers:


- Support rollers should be used after 3 meters
- Make sure that the cap (cover) is fixed properly
- Use an appropriate hand tool (screw driver) to open the cap
- Be careful not to damage the fixing nail of the cap (cover)

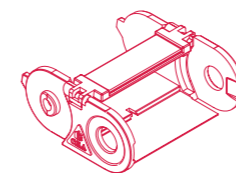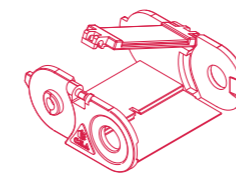

### How to choose end bracket

#### End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment .

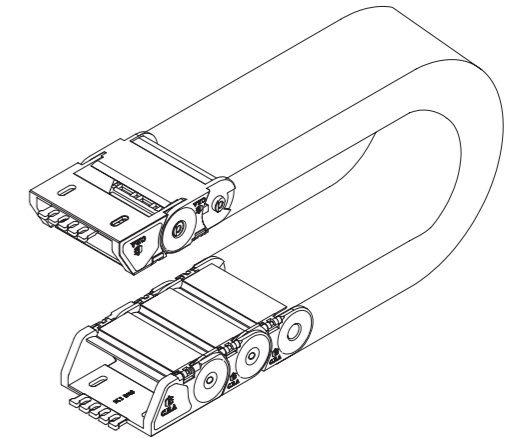

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SC2YK 100 R_01	SC2 B100	70	120

