

SB2


CABLE CARRIERS MEDIUM SERIES

Inner Height (A) 25mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	
<ul style="list-style-type: none"> • One side is fixed, other (radius) side is openable • Should be used in supporting trays • Suitable for long movement lengths 	SB2 040 R_01	40-75-100-125	25	40	33	52	0.545gr
	SB2 065 R_01	40-75-100-125	25	65	33	77	0.607gr


Maximum working speed :7M/S

Radius MUST be given in your orders.Example:

SB2 065 R75

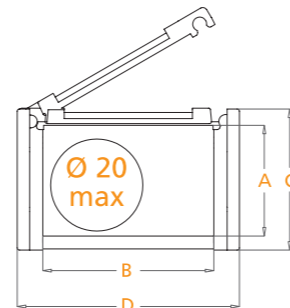


R mm	H mm	X mm	M mm	Y mm
40	40	113	95.5	204
75	40	183	130.5	314
100	40	233	155.5	392
125	40	283	180.5	471

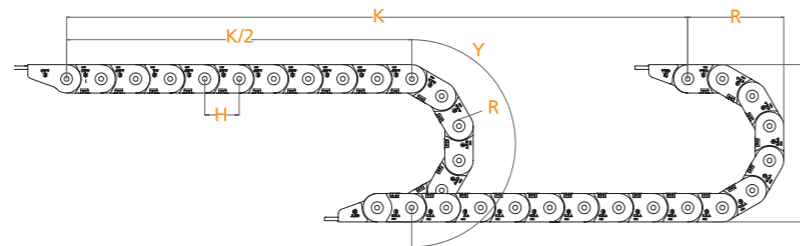


L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$

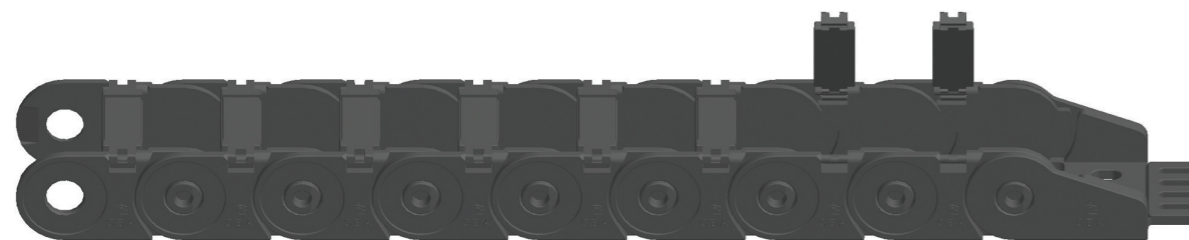


IMPORTANT POINTS

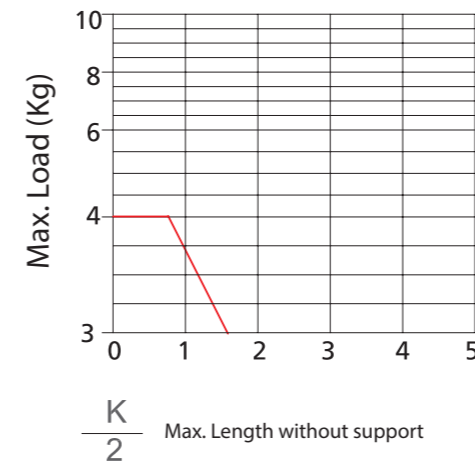

Self-supporting Capacity Diagram


Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

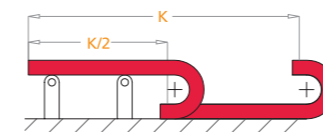

How to use support rollers:


- Support rollers should be used after 2 meters
- Make sure that the cap (cover) is fixed properly
- Use an appropriate hand tool (screw driver) to open the cap
- Be careful not to damage the fixing nail of the cap (cover)

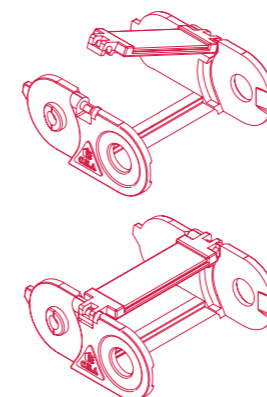

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

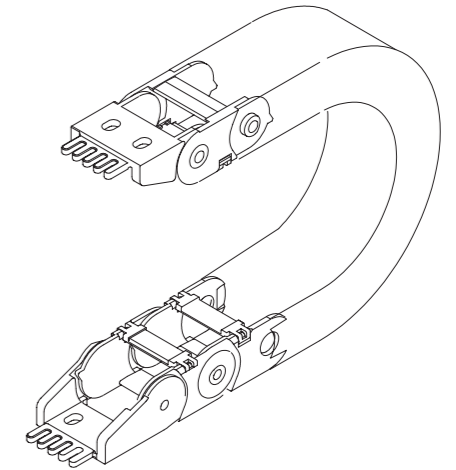

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SB2 040 R_01	SB2 B040	24	52
SB2 065 R_01	SB2 B065	49	77

