

SE9 AL


HEAVY SERIES WITH ALUMINUM BAR

Inner Height (A) 72mm	Code	Radius	(A)mm	(B)mm	(C)mm	(D)mm	Weight Kg/Mt
<ul style="list-style-type: none"> Both up and down sides have openable aluminum bars Suitable for long distances No complete covers (caps) (on both sides) Should be used in supporting tray Suitable to use with vertical separators 	SE9 AL 250 R_01	200-250-300-350-420	72	250	100	290	3.725gr
	SE9 AL 300 R_01	200-250-300-350-420	72	300	100	340	3.964gr
	SE9 AL 400 R_01	200-250-300-350-420	72	400	100	440	4.085gr
	SE9 AL 500 R_01	200-250-300-350-420	72	500	100	540	4.273gr
	SE9 AL 600 R_01	200-250-300-350-420	72	600	100	640	4.573gr
	SE9 AL 700 R_01	200-250-300-350-420	72	700	100	740	4.673gr


Maximum working speed :5M/S

Radius MUST be given in your orders. Example:

SE9 AL 500 R200

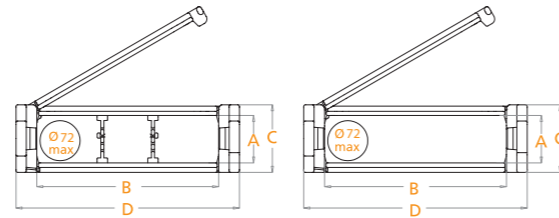


R mm	H mm	X mm	M mm	Y mm
200	100	500	350	828
250	100	600	400	985
300	100	700	450	1142
350	100	800	500	1299
420	100	940	560	1350

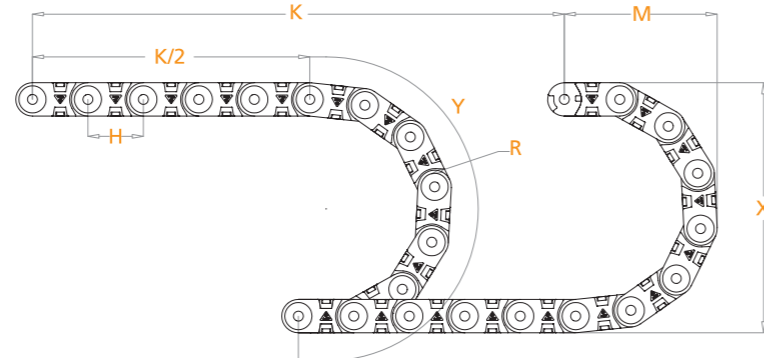


L: Total length to be used
K: Movement distance
Y: Radius

$$L: \frac{K}{2} + Y$$

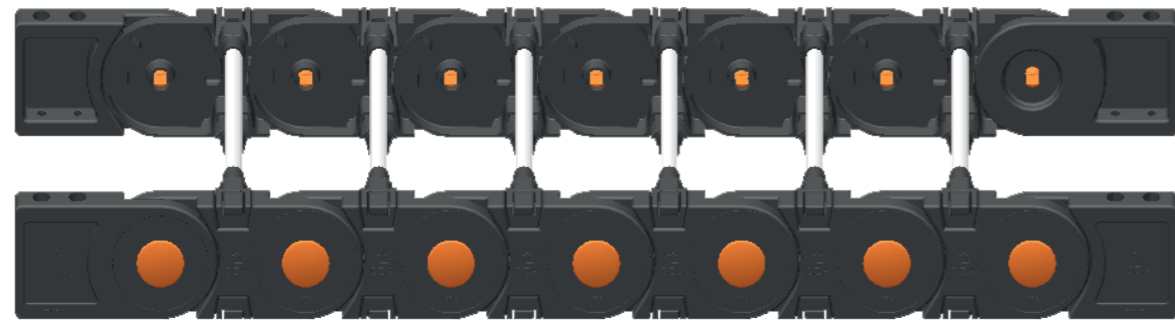

IMPORTANT POINTS

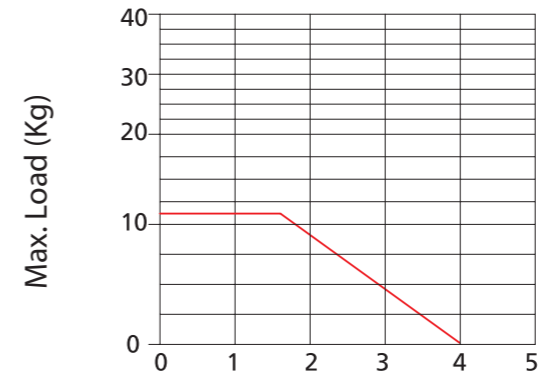


$$\frac{K}{2} \text{ Max. Length without support}$$

Self-supporting Capacity Diagram

Self-supporting capacity of the cable carrier according to weight of the cables and hoses

$$\frac{K}{2}$$

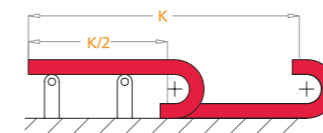


How to use support rollers:

- Support rollers should be used after 4 meters
- Make sure that the cap (cover) is fixed properly
- Use an appropriate hand tool (screw driver) to open the cap
- Be careful not to damage the fixing nail of the cap (cover)
- Be sure that side stoppers, used to fix end brackets are fixed properly

How to choose end bracket

End bracket

End brackets are the parts to be used to fix the cable carrier to the machine or equipment

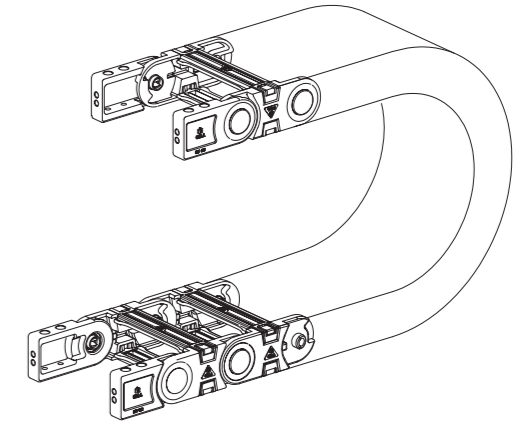

Should be attached to the both ends of the cable carrier

CABLE CARRIER CODE	END BRACKET CODE	A	B
SE9 AL 250 R01	SE9 B01	X	X

